


Hardware Reset

Open the shell of the device, and you will see the ports of PCB like that:

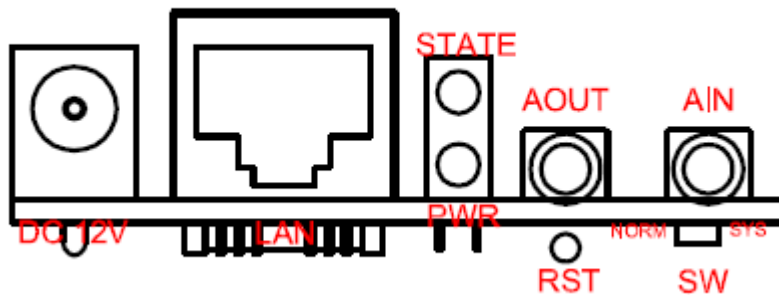

The operation is as follows:

First, when the device is off power, use a small stick press and hold the “RST” button, don’t release.

And then, connect power to the device,

Watching the “STATE” light until it flash normally. (this process will spend about 10-30 seconds), at most, just need to see the "STATE" light is changed.

Then, release the stick-----reset successfully.

NOTE: if reset successfully, the IP address will turn back to the default: 192.168.1.19; if not, just prove it’s failed.