

ITM Emergency Update

When device appear some abnormal problem, (like: couldn't reset the device, can't search the IP and so on) , we can emergency update the ITM to the device.

Emergency update is that through turning on the emergency switch, get a most simple and clear environment, and write the program into device again to replace the old one.


The operation is as follow

1. turn off the power of device, find the "SW" switch, put the switch from "NORM" to "SYS" (it's the operation to IP Camera), or from "1" to "ON" (it's the operation to network video server, decoder, disk video recorder)

Note: Enabling the switch, the IP of device will turn into "192.168.1.19",and we can't search the IP on the network. So, connect the device with PC by a net wire.

2. Click "START" of PC windows ----"RUN"---Input "ping 192.168.1.19 -t"

And if appear the window as follows, we can continue the next operation.

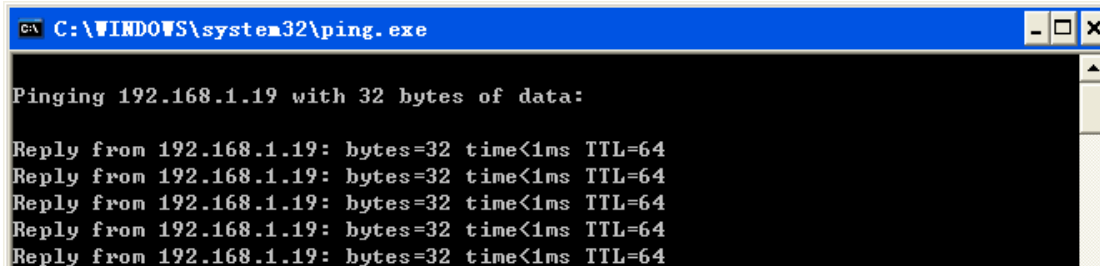

```
C:\WINDOWS\system32\ping.exe

Pinging 192.168.1.19 with 32 bytes of data:

Reply from 192.168.1.19: bytes=32 time<1ms TTL=64
Reply from 192.168.1.19: bytes=32 time<1ms TTL=64
Reply from 192.168.1.19: bytes=32 time<1ms TTL=64
Reply from 192.168.1.19: bytes=32 time<1ms TTL=64
Reply from 192.168.1.19: bytes=32 time<1ms TTL=64
```

3. Choose and open the corresponding update software



4. Click "file"---choose the update file----"update"---wait updating end

5. Turn off power of device, restore the "SW" switch.

Note: The IP address restore before updating